


1. Place the two sides on the undercarriage of the Omni-roller and clip them down into position with the slider. Add the back and fix it to the sides with the mouldings. Now you can insert the trays at any desired height.

2. The rods can be placed simply in the special notches. Their length can be adjusted to the width of your files. You can create a moveable cupboard simply by placing trays in the bearing frames.


3. Three different types of rod are available for hanging files:

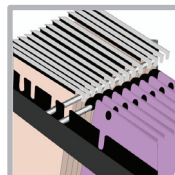

*A. For frontal systems
3 rows of files with a total
length of 1.36 m per frame*



*B. For lateral systems
1 row of files with a total
length of 1.15 m per frame*

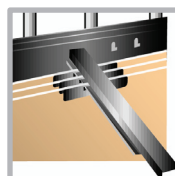

*C. For the Jalema system
1 lateral row of Jalema system
files.*